

## What's Included

Zogics ClearVu/Encore Dispenser includes the following components:

- 1 x Dispenser
- 1 x Double-sided tape (attached to dispenser)
- 1 x Key (ClearVu 46oz. only)



ClearVu®  
46 oz. tank

9346k  
key



ClearVu® Encore®  
30 oz. tank

## Opening the Dispenser



Figure 1



Figure 2

### ClearVu (46oz tank)

To open the dispenser lid, insert key into slot at back, right side of lid and push in on key (Figure 1). Back of lid will pop off.

### ClearVu Encore (30oz tank)

Hold dispenser with thumbs near front of lid and pop lid up using tabs near the back of the dispenser (Figure 2). No key is necessary.

## Filling Instructions

**NOTE:** For dispenser to work properly, use foam soap only for foaming dispenser models. Handles most foam soaps from 0–14 centipose (cps).

1. Remove lid.
2. Fill with appropriate soap and replace lid.
3. Priming the dispenser will take 6–10 pumps.

## Maintenance

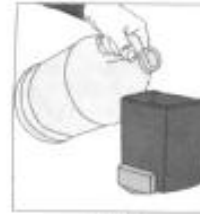


Figure 5.a

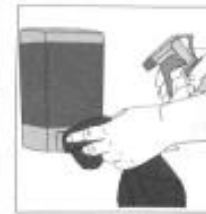


Figure 5.b

**It is important to clean and maintain dispenser and check battery on a regular, scheduled basis. Failure to do so can result in malfunction.**

- Open dispenser. Flush tank and pump mechanism with warm water to remove residue and contaminants. Refill with new soap and replace lid. (Figure 5.a)
- Cleaning all touch-points on dispenser with a disinfectant should be part of a regular cleaning schedule. (Figure 5.b)
- Periodically give the dispenser an overall cleaning. All internal and external parts should be cleaned thoroughly.

**CAUTION:** Never use abrasive cleansers when soap dispensers.

## Mounting Instructions

---

- Use included tape on glazed tile, painted metal, or unpainted metal walls. Tape should not be used on porous surfaces like brick or wood.
- On all other wall surfaces, use screws and anchors (not included) or other appropriate hardware based on surface type.
- Locate dispenser above a sink or counter. We recommend you never locate the dispenser where spillage can fall on the floor, creating a hazardous condition.

- Installer will be held responsible for proper installation.
- To be in compliance with ADA regulations, the dispenser should be mounted no more than 48" from the ground.

### Mounting with tape

---



figure 3

1. Thoroughly clean wall surface and let dry completely. For silicone build-up, use a pumice-type cleaner or grout cleaner to clean the surface.
2. Peel off paper from back of tape (supplied). Press dispenser firmly to the wall and hold for at least 30 seconds to make sure tape has completely adhered to the wall. (Figure 3)
3. Wait 24 hours before filling with soap to ensure that the tape has completely adhered to the wall before adding weight.

### Mounting with screws and anchors

---



figure 4

1. Remove lid. Push latch out and detach dispenser from backplate. (Figure 4)
2. Using the backplate as a template, mark hole locations on wall.
3. Drill 3/16" diameter holes for anchors and screws or other hardware. Attach dispenser to backplate and replace lid.